


\* NP100 upgrade FOR SA.12 OR SA.100


(A) Low Gain Version use  
6SN7 x 2

(B) High gain Version use  
6SL7 x 2

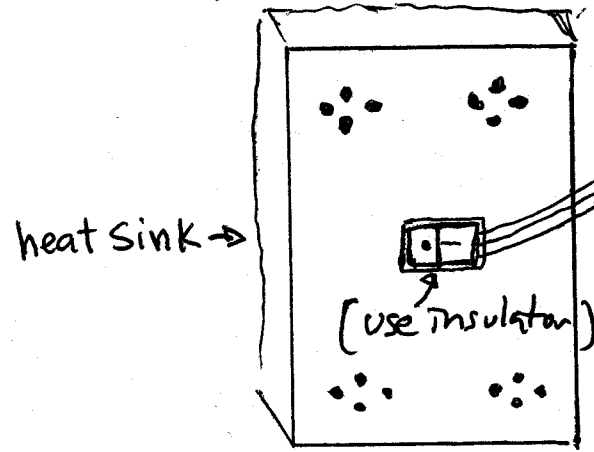

① enlarge old heat sensor transistor hole to 1/8" and deburr.

② Mount New heat sensor transistor on heat sink where the old one was.

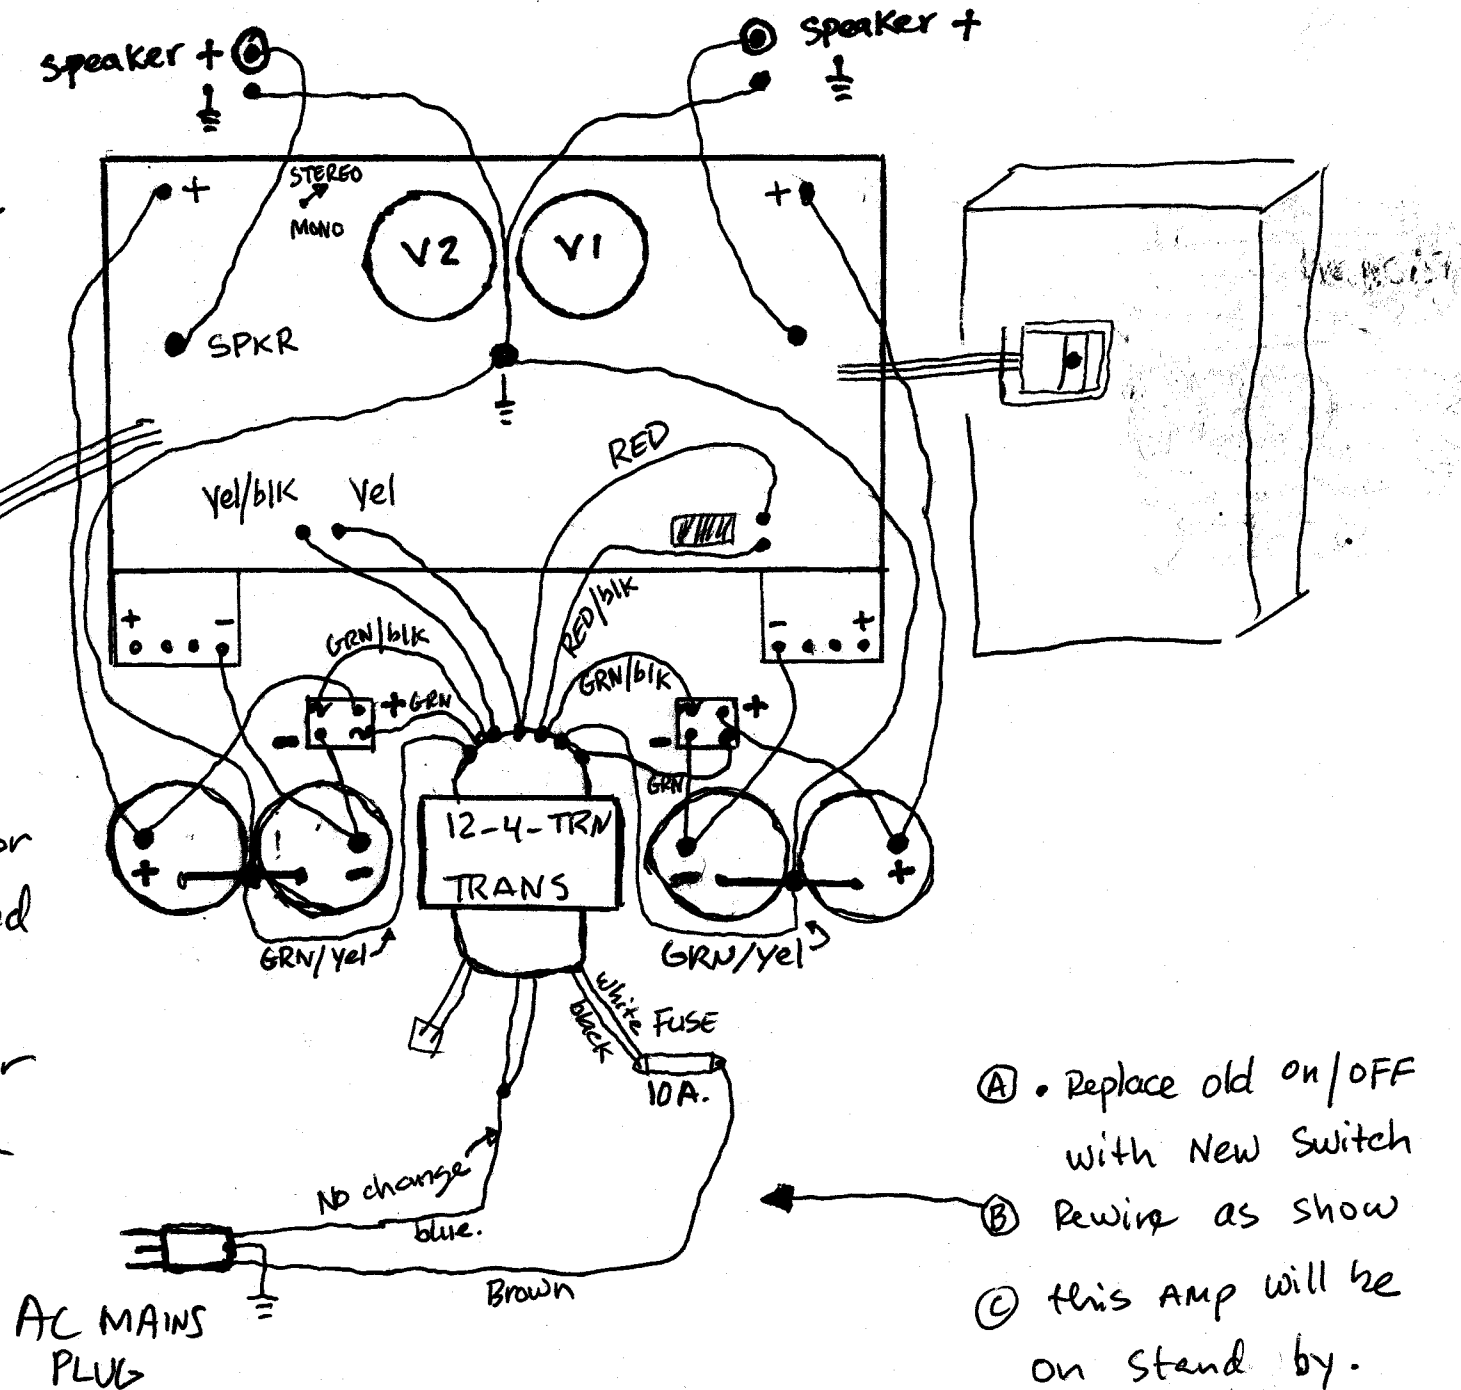

- (A) • Replace old on/off with New Switch
- (B) Rewire as show
- (C) this Amp will be on Stand by.